BROKIS®

TRIMLESS CEILING CONNECTION

CM19243

COMPONENTS INCLUDED WITH UNIT:

1× cover plate (**1**)
1× clamp nut (**2**)
1× plastic clamp (**3**)
1× clamp housing (**4**)
1× ceiling anchor (**5**)
1× clip (**6**)
1× installation tool (**7**)
1× wrench 1 (**8**)
1× wrench 2 – ends A and B (**9**)

WARNING:

Installation must be carried out by a qualified electrician only.

Switch off power at main circuit panel prior to installation!

The manufacturer assumes no liability for damage occurring in transport or resulting from incorrect installation.

BROKIS S.R.O.
ŠPANIELOVA 1315/25
163 00 PRAHA 6 - ŘEPY
CZECH REPUBLIC

ORG. ID 64940799
VAT ID CZ64940799
C 42174 MĚSTSKÝ SOUD
V PRAZE

TEL +420 567 211 517
TECHNICAL@BROKIS.CZ
INFO@BROKIS.CZ
WWW.BROKIS.CZ

1



2

3

4



5

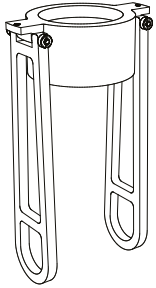

6

7



8



9

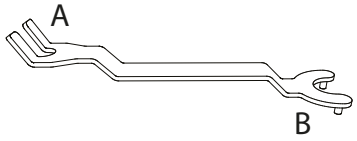

BROKIS®

BROKIS S.R.O.
ŠPANIELOVA 1315/25
163 00 PRAHA 6 - ŘEPY
CZECH REPUBLIC

ORG. ID 64940799
VAT ID CZ64940799
C 42174 MĚSTSKÝ SOUD
V PRAZE

TEL +420 567 211 517
TECHNICAL@BROKIS.CZ
INFO@BROKIS.CZ
WWW.BROKIS.CZ

1. DRILLING THE OPENING

Suitable for a panel thickness of 11-18 mm in all versions, but ideally designed for drywall sheets with a thickness of 12,5 mm. The recess depth of the clamp will vary depending on the thickness of the drywall. i.e. the thicker the panel, the deeper the clamp will sit within the housing. To install the TRIMLESS unit, use a hole saw to cut an opening in the ceiling with a diameter of 68-69 mm.

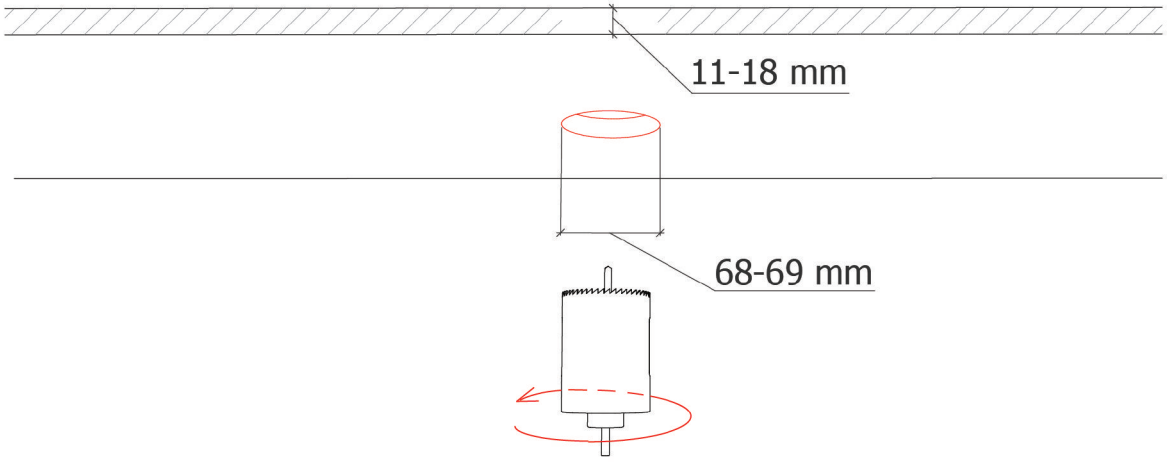

2. PREPARING THE COMPONENTS FOR ASSEMBLY

Slide the clip (**6**) onto the rope of the light and position it approximately 300 mm from the end of the rope.
Slide the other components onto the rope in the following order:

1. cover plate
2. clamp nut
3. plastic clamp
4. clamp housing
5. ceiling anchor

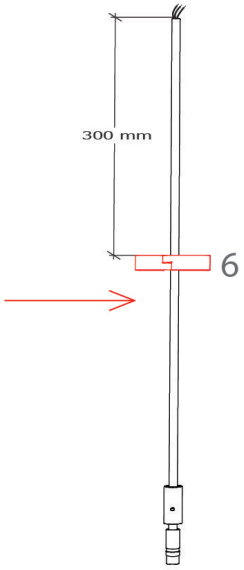

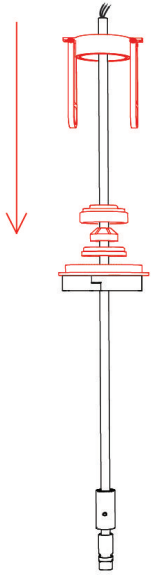

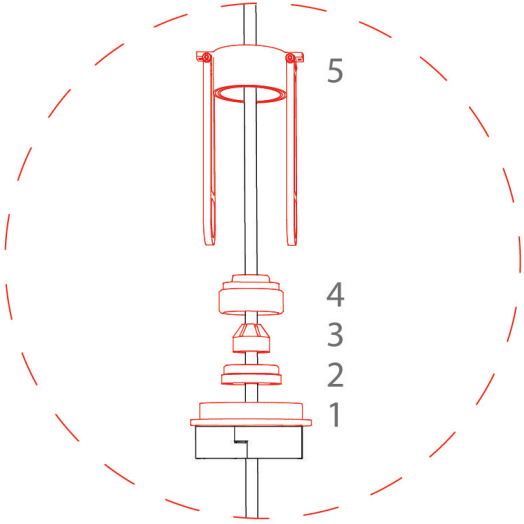

3. **BUILDING WIRING**

Connect the light to the building wiring according to the diagram.

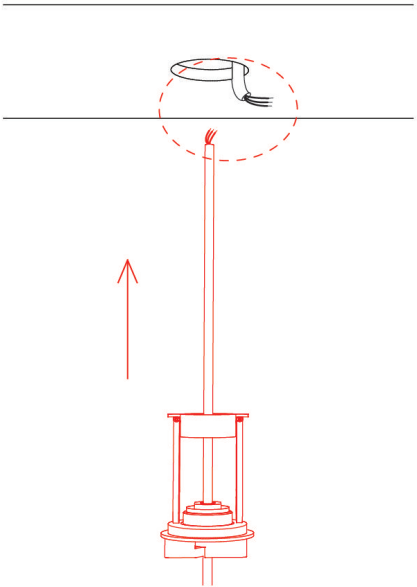

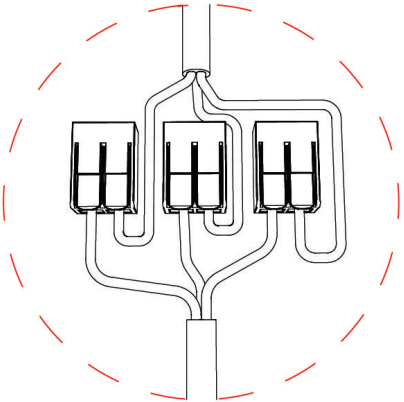

4. **INSTALLING THE TRIMLESS SYSTEM 1/6**

Slide the installation tool (**7**) onto the rope of the light. Screw the installation tool into the inner thread of the ceiling anchor (**5**). Insert the ceiling anchor into the opening so that the anchor arms are above the drywall sheet.

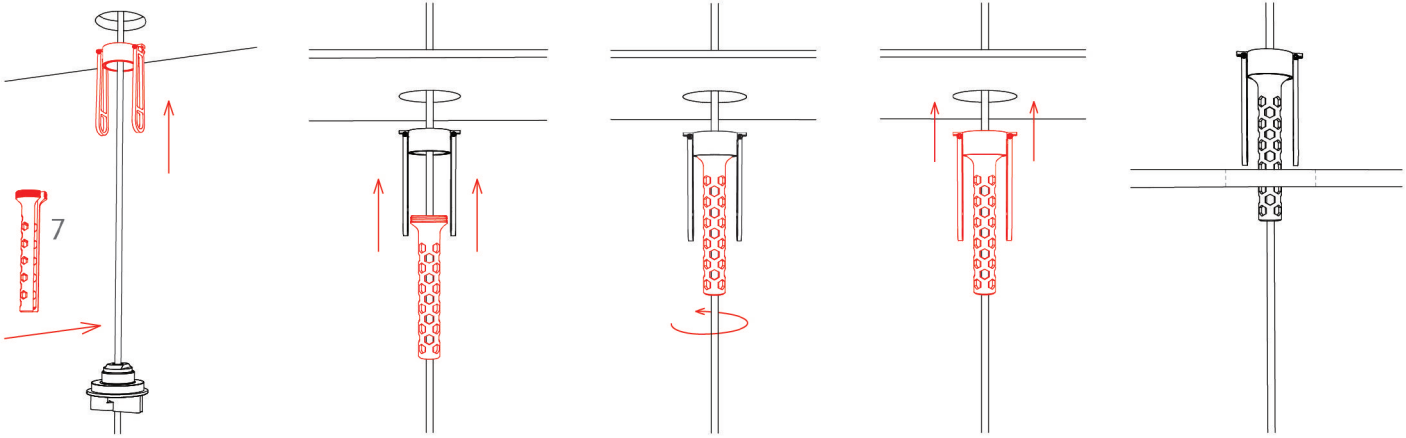

5. **INSTALLING THE TRIMLESS SYSTEM 2/6**

Pulling downwards will cause the anchor arms to open and lie flat against the upper surface of the drywall sheet.

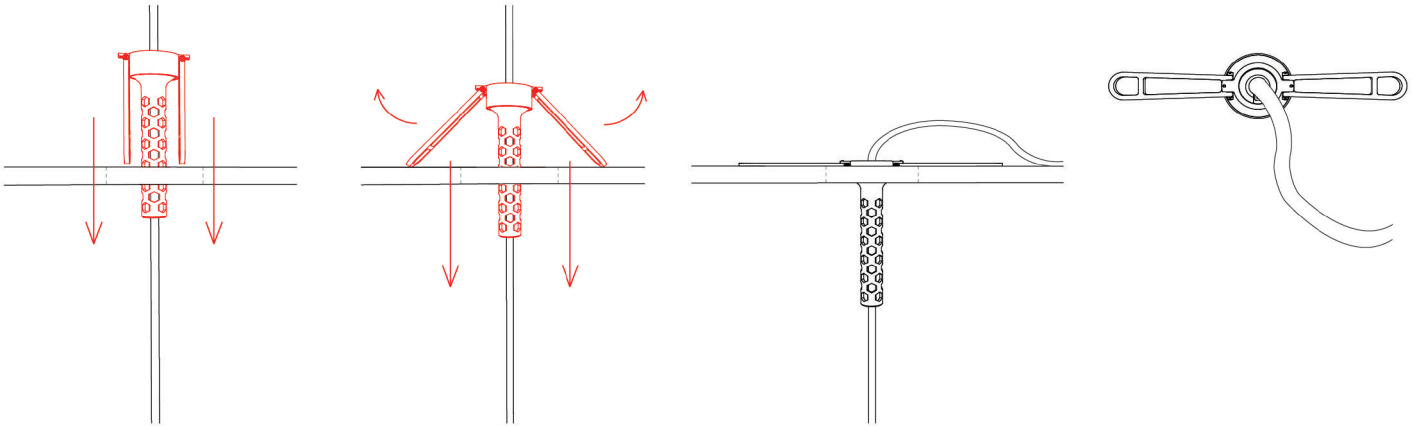

6. **INSTALLING THE TRIMLESS SYSTEM 3/6**

Lift the cover plate (**1**) and turn it counterclockwise to install it on the ceiling anchor while holding the installation tool. Tighten it first by hand and then use wrench 1 (**8**) while preventing the entire assembly from rotating.

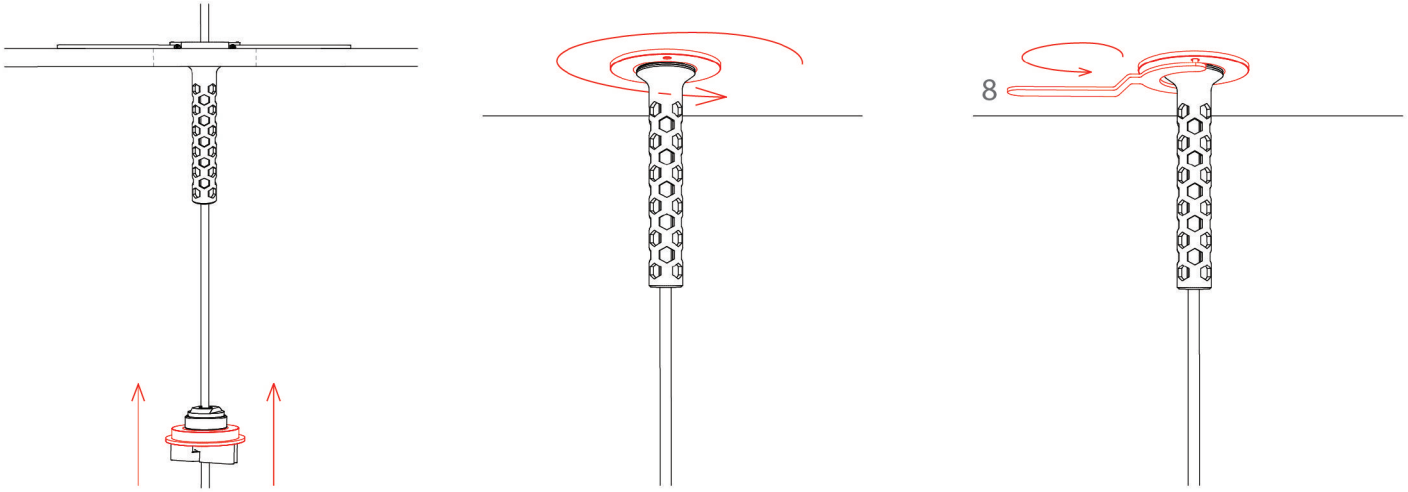

7. **INSTALLING THE TRIMLESS SYSTEM 4/6**

Unscrew the installation tool from the ceiling anchor and remove it from the rope.

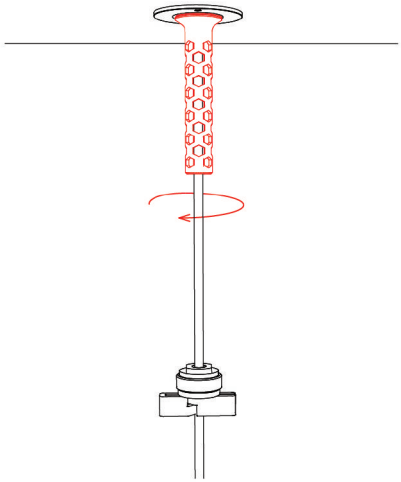

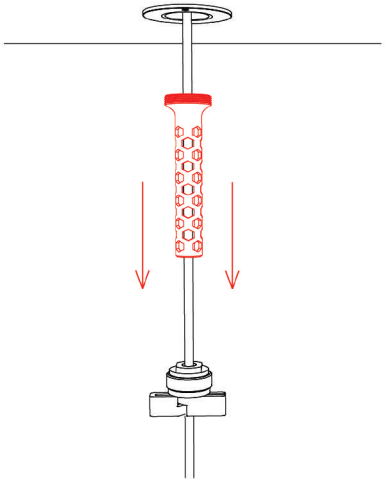

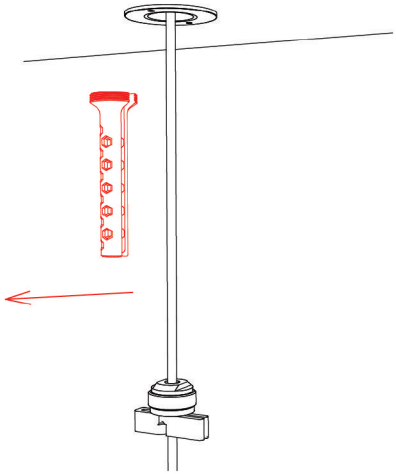

8. **INSTALLING THE TRIMLESS SYSTEM 5/6**

Take the clamp housing (**4**) and screw it onto the component using wrench 2 (**9**) end A.

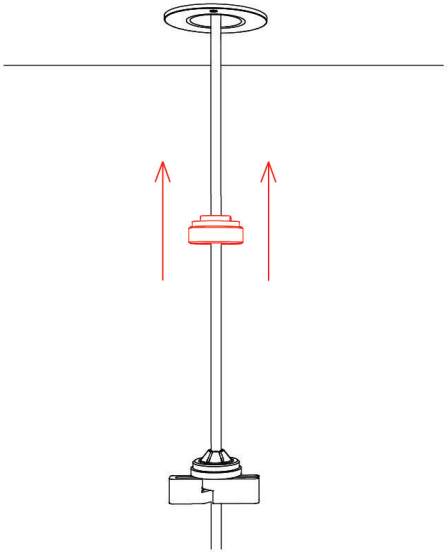

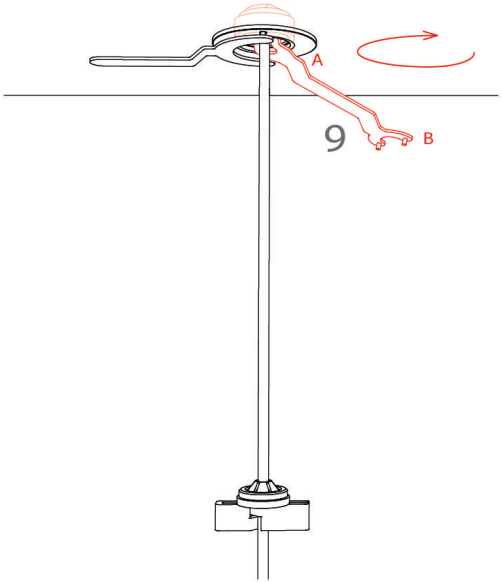

9. **INSTALLING THE TRIMLESS SYSTEM 6/6**

Adjust the power cable to the desired height.
Take the plastic clamp (**3**) with nut (**2**) and screw them onto the component using wrench 2 end B. Remove the clip from the rope.

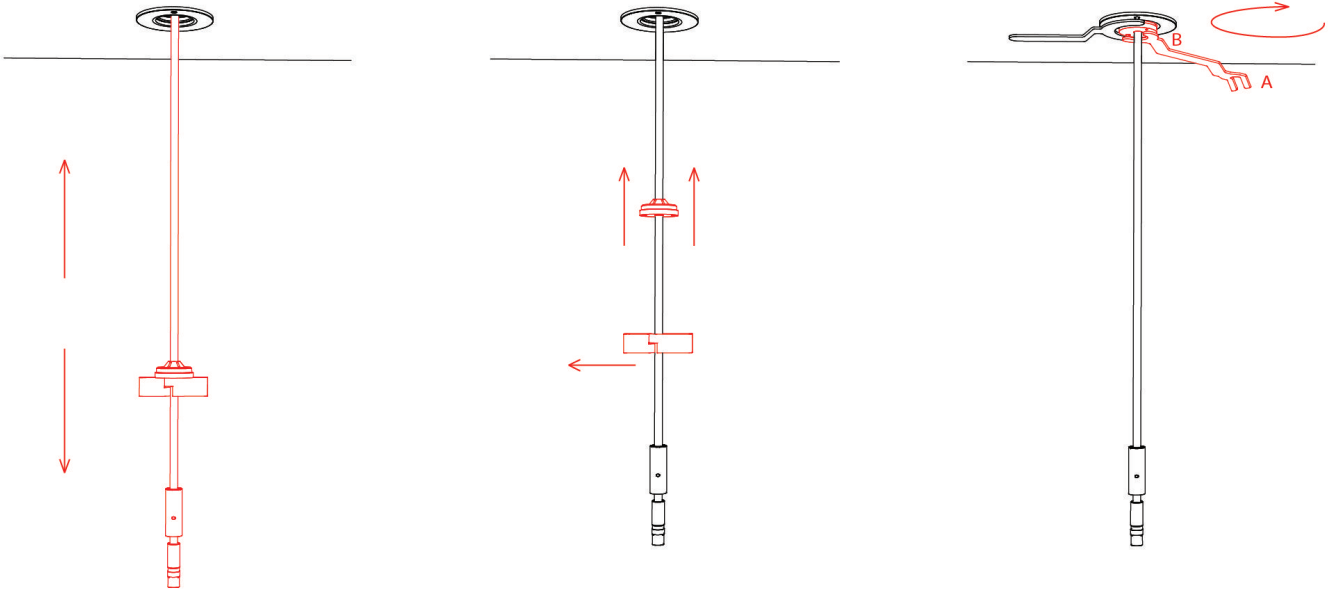
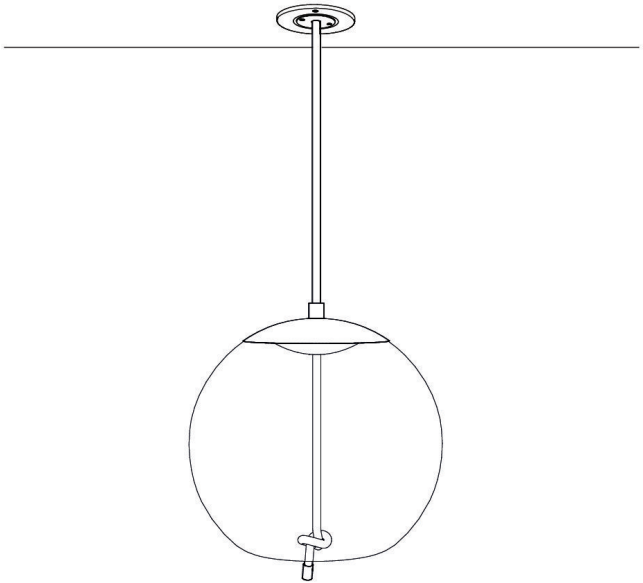
10. **PENDENT LIGHT USING THE TRIMLESS SYSTEM**